FIG. 1

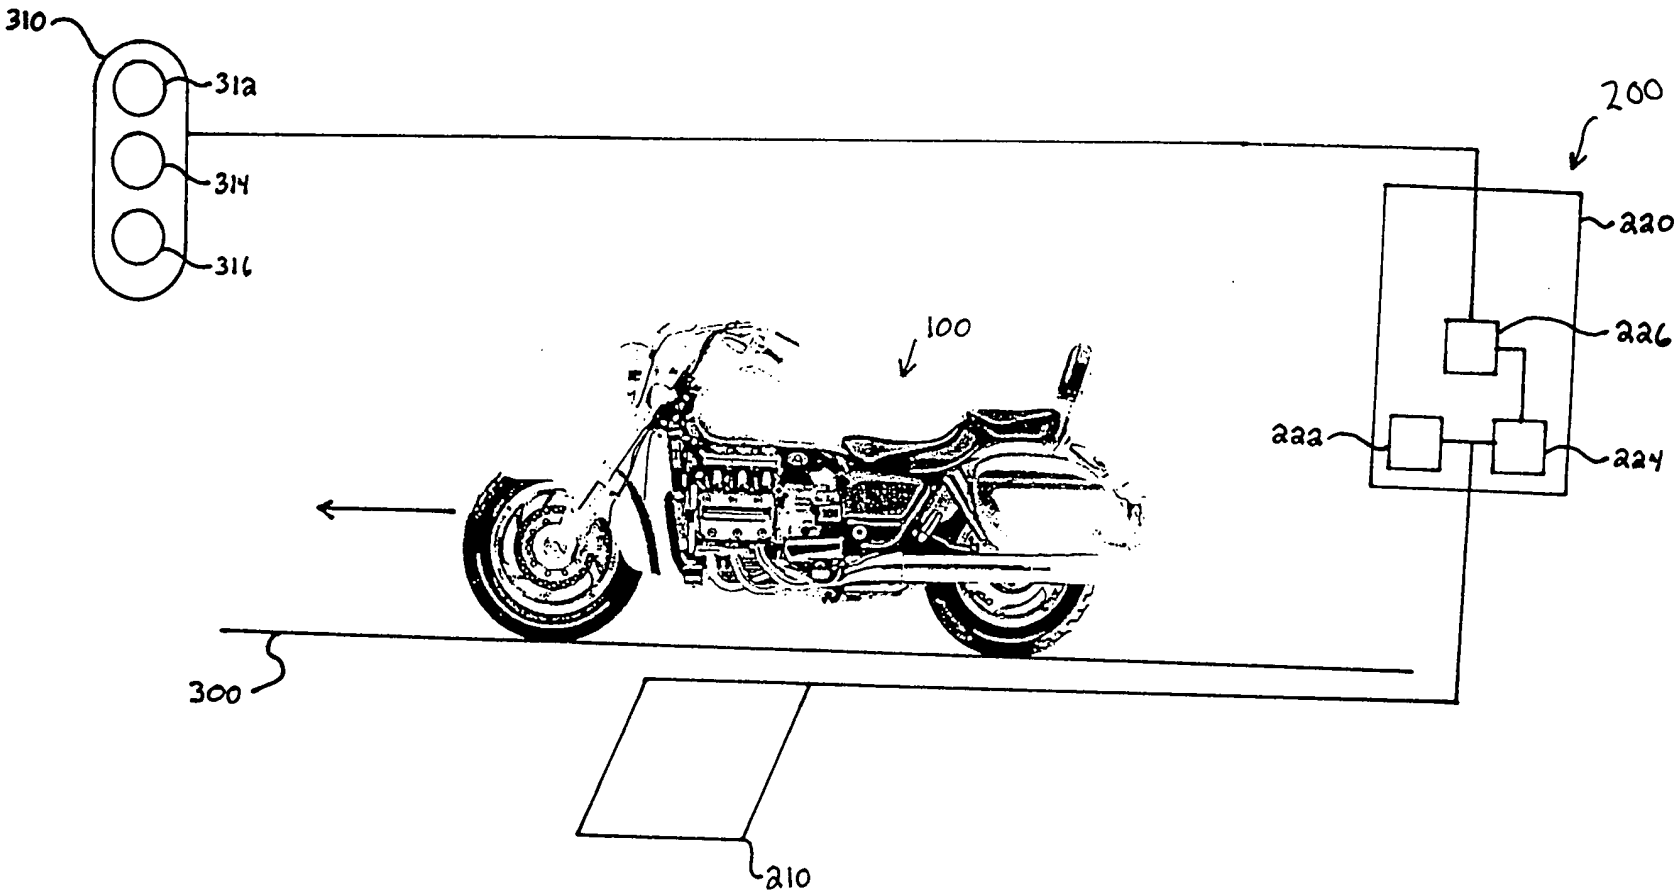

FIG. 2

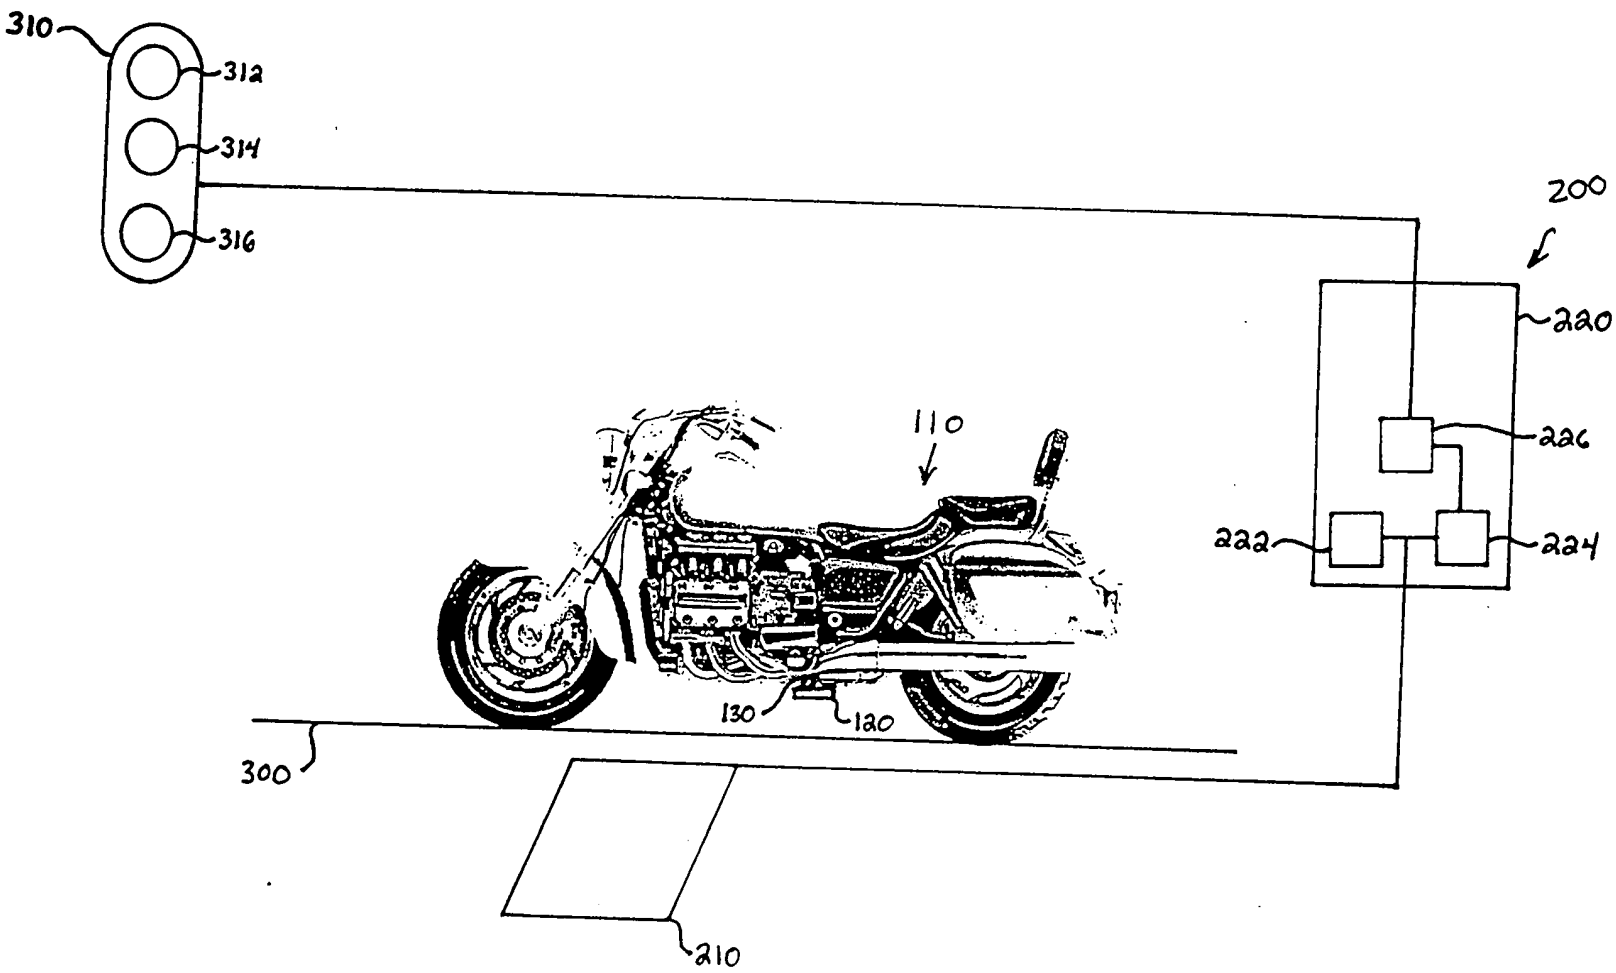

FIG. 3

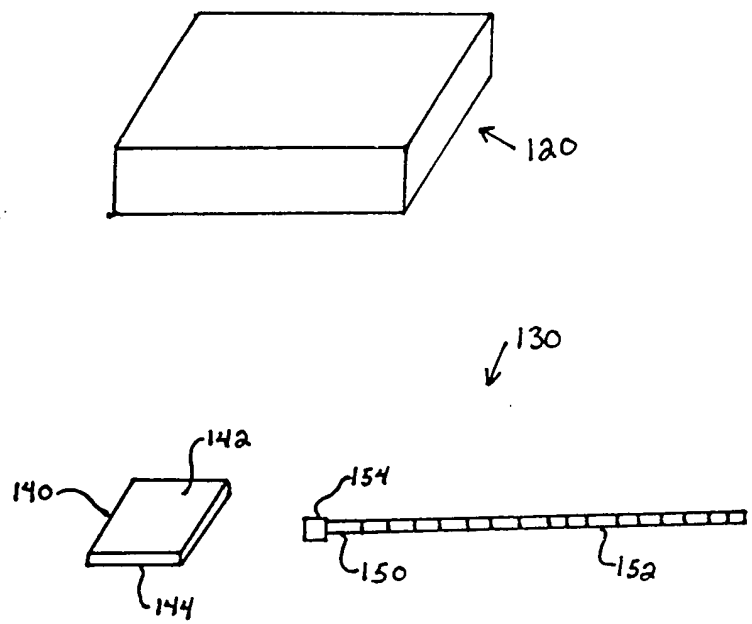

FIG. 4

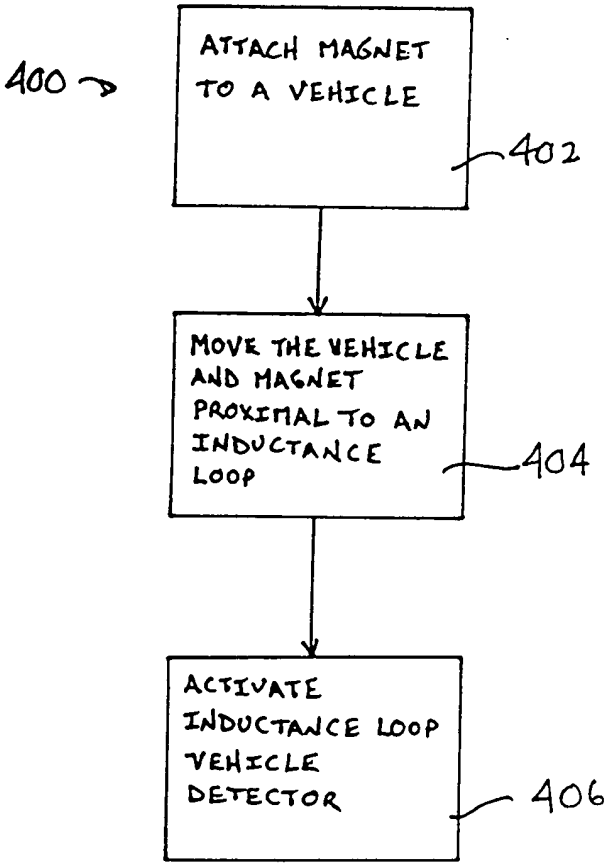
400
ATTACH MAGNET TO A VEHICLE
402
MOVE THE VEHICLE AND MAGNET PROXIMAL TO AN INDUCTANCE LOOP
404
ACTIVATE INDUCTANCE LOOP VEHICLE DETECTOR
406

FIG. 5

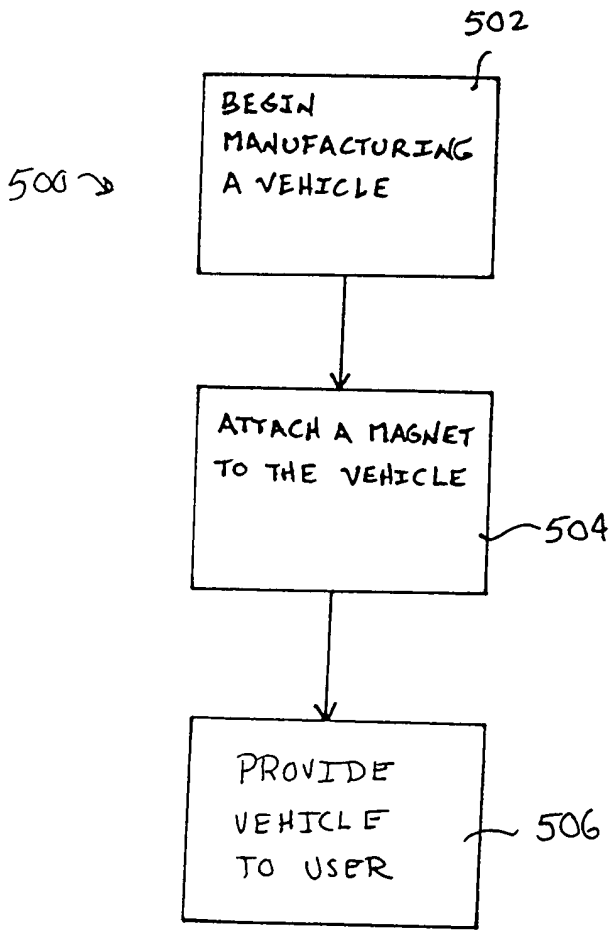
502
500
BEGIN MANUFACTURING A VEHICLE
ATTACH A MAGNET TO THE VEHICLE
504
PROVIDE VEHICLE TO USER
506

FIG. 6

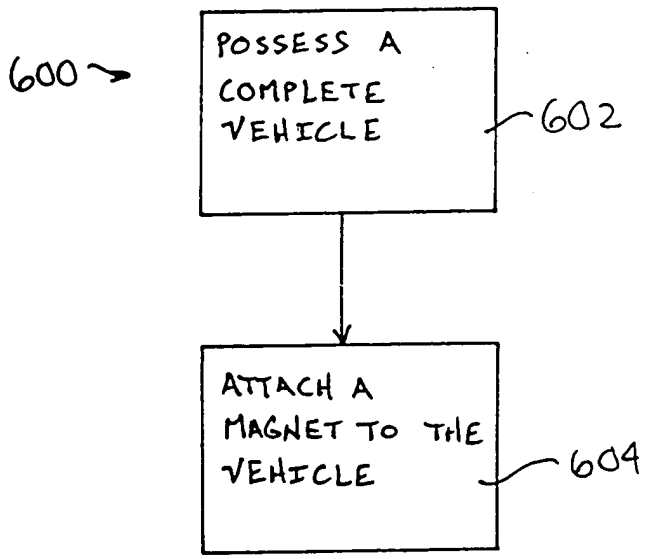
600
POSSESS A COMPLETE VEHICLE
602
ATTACH A MAGNET TO THE VEHICLE
604

FIG. 7

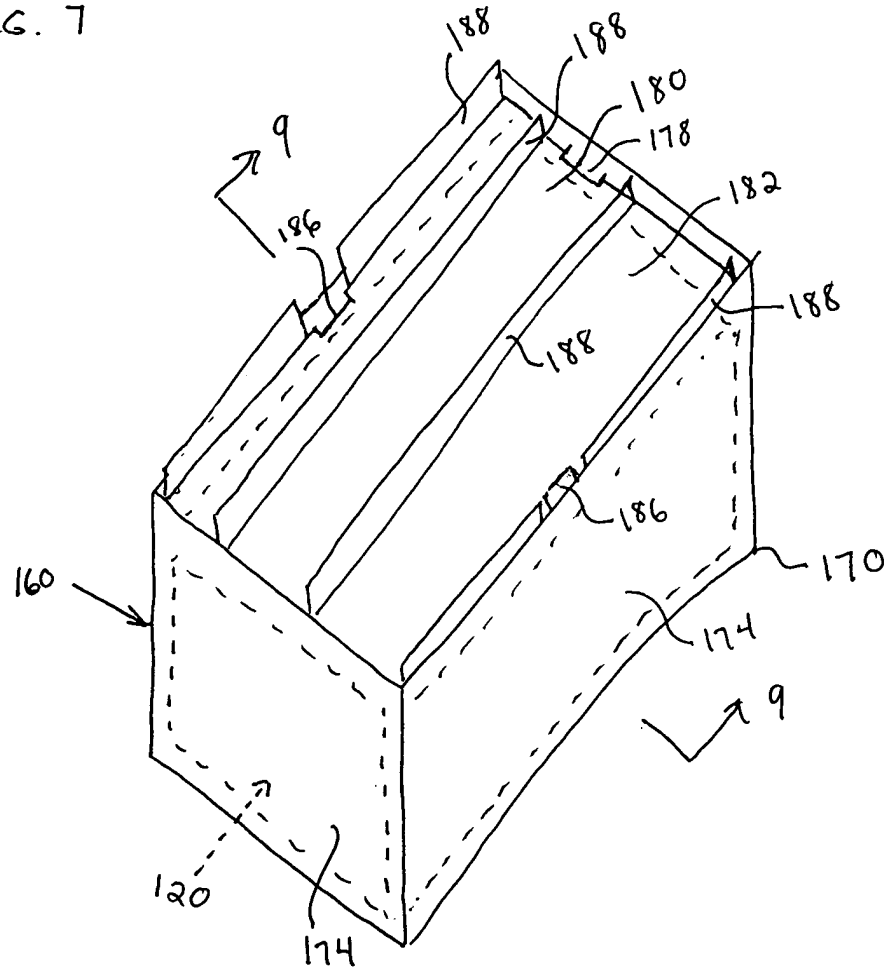

FIG. 8

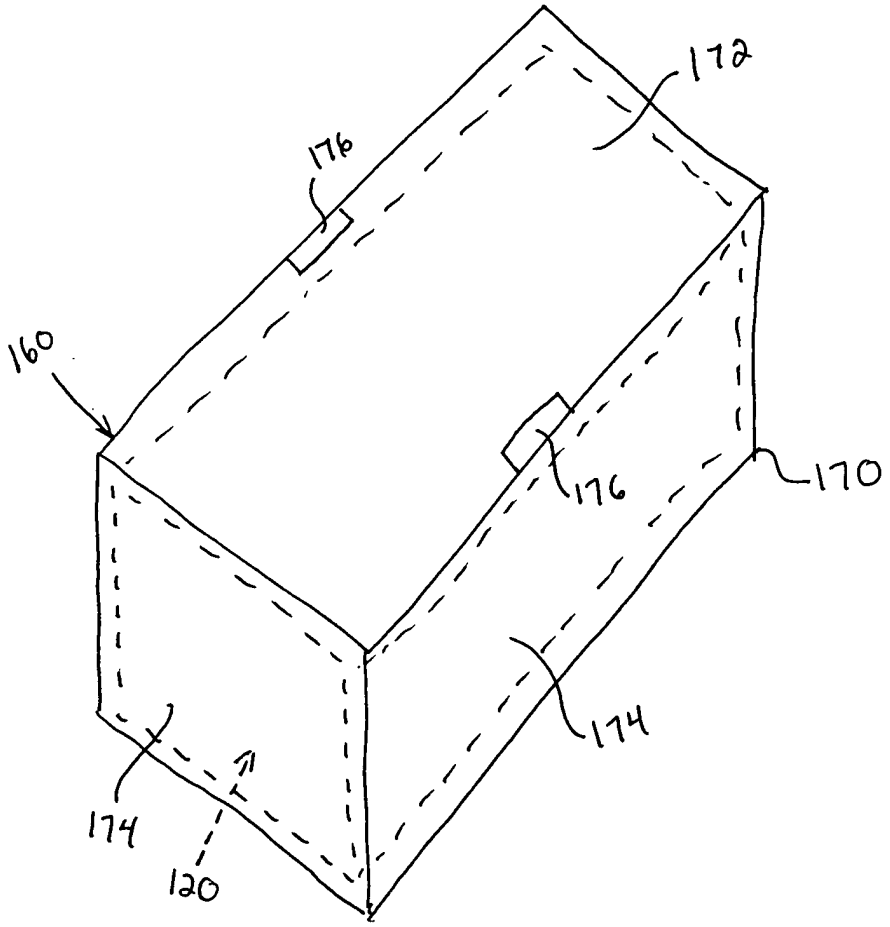

FIG. 9

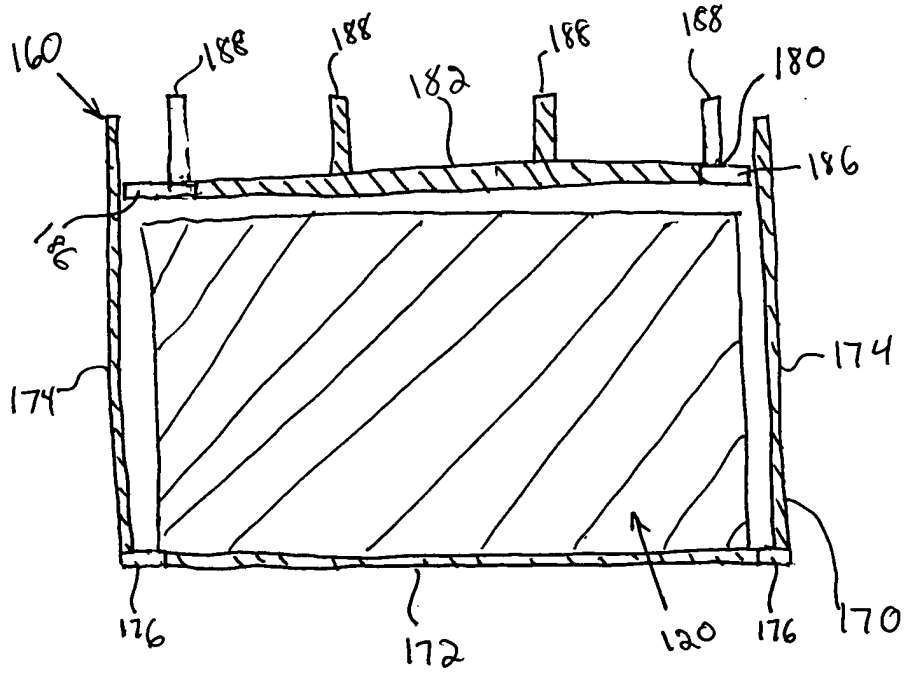

FIG. 10

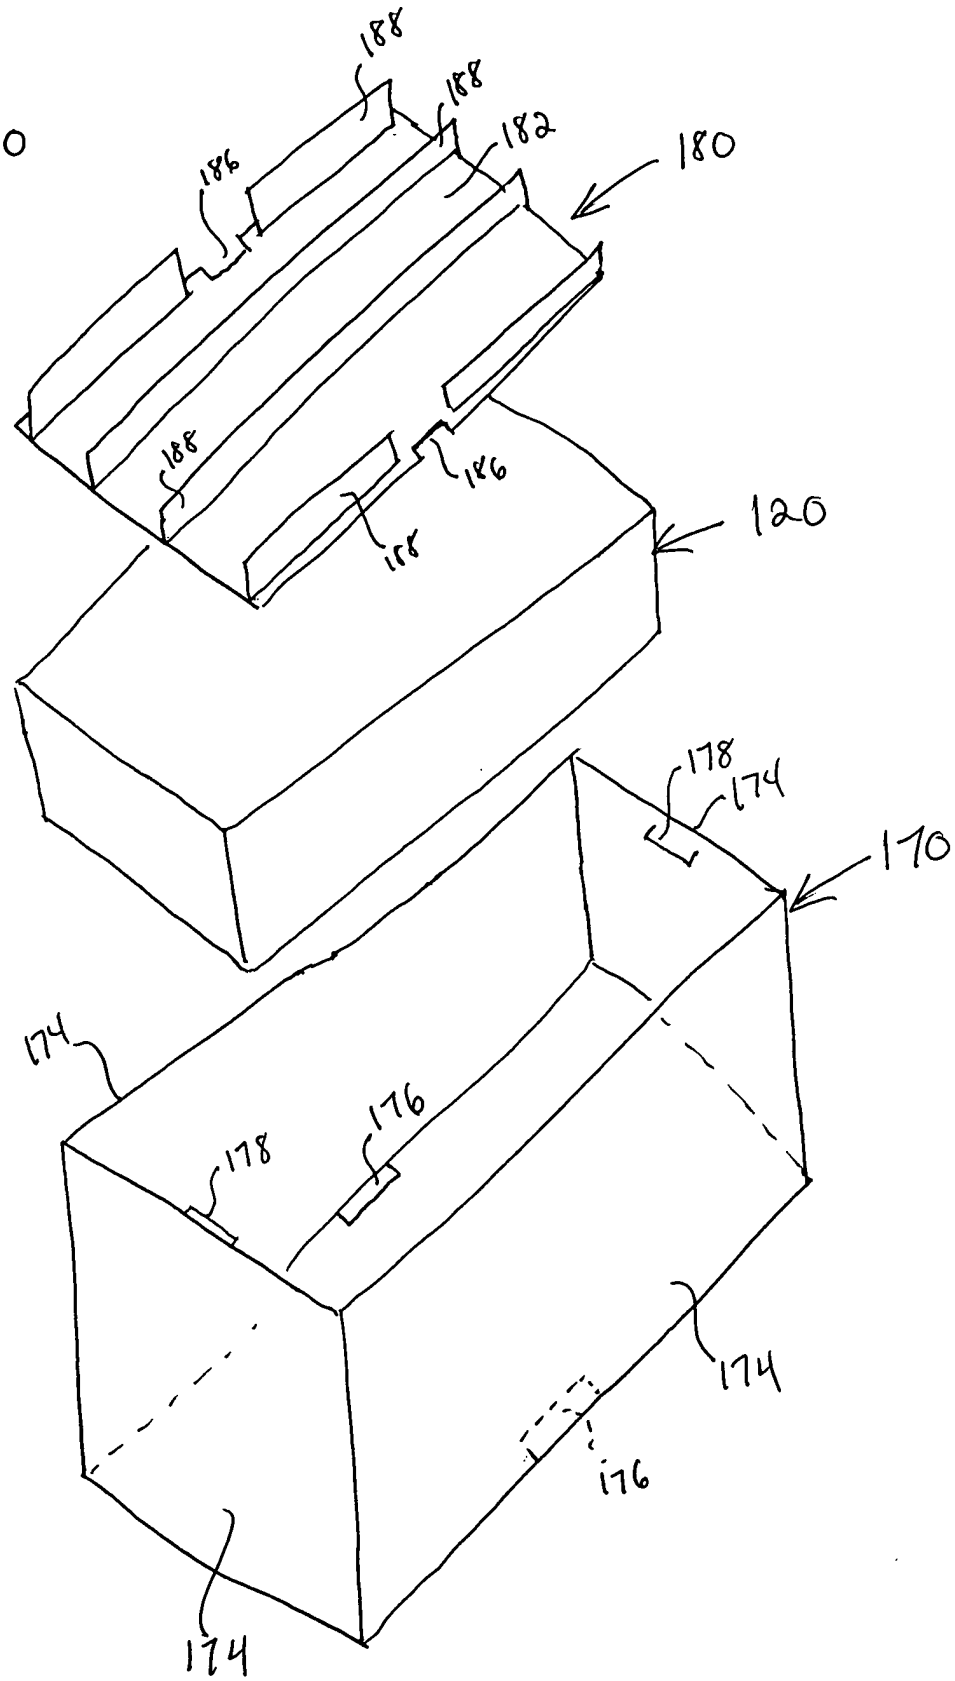
188
188
182
180
186
188
186
188
120
178
174
170
174
176
178
174
176
174